
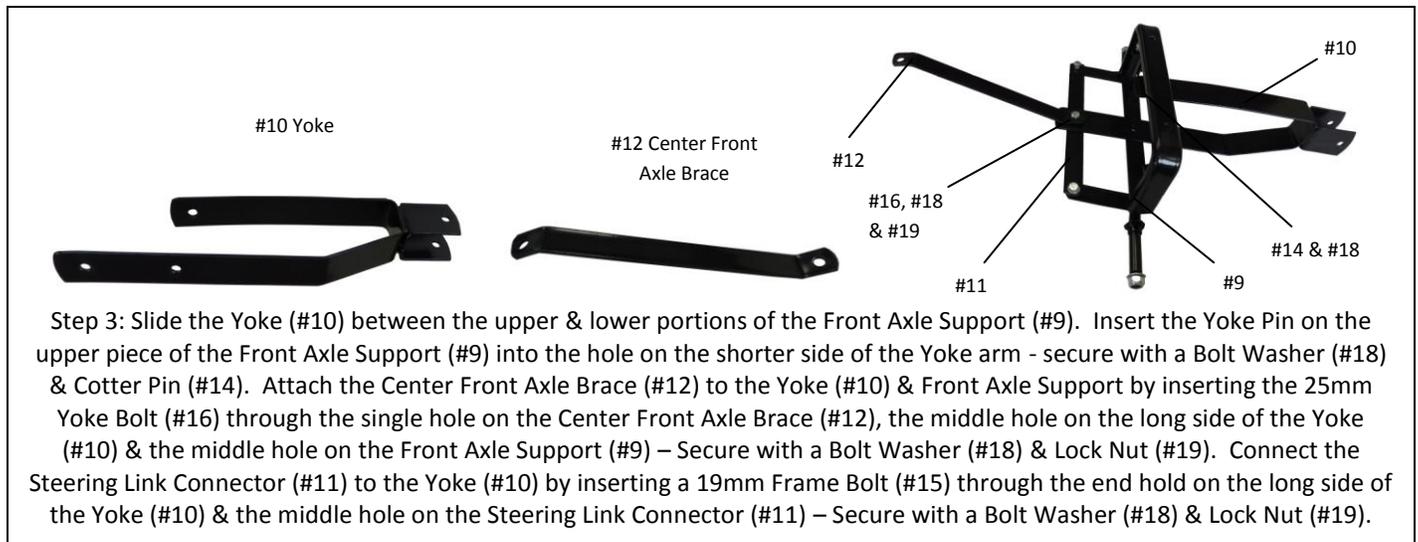
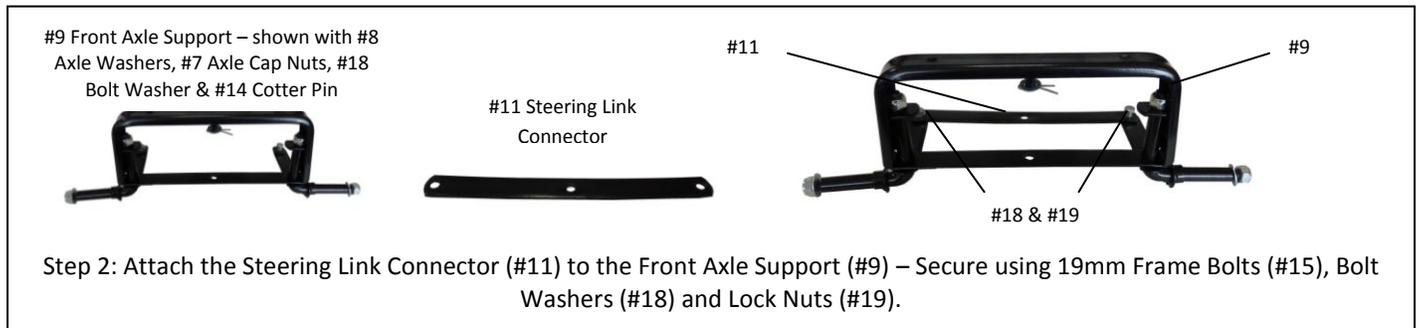


YARD WAGON Assembly Instructions

# Description (Qty.)	# Description (Qty.)	# Description (Qty.)
#1 – Bed (1)	#8 – Axle Washers (4)	#15 – 19mm Frame Bolts (8)
#2 – Wheel (4)	#9 – Front Axle Support (1)	#16 – 25mm Yoke Bolts (1)
#3 – Handle (1)	#10 – Yoke (1)	#17 – 60mm Handle Bolt (1)
#4 – Rear Axle Support (1)	#11 – Steering Link Connector (1)	#18 – Bolt Washers (12)
#5 – Left Rear Axle Brace (1)	#12 – Center Front Axle Brace (1)	#19 – Lock Nuts (16)
#6 – Right Rear Axle Brace (1)	#13 – Handle Coupler (1)	#20 – 20mm Machine Screws (2)
#7 – Axle Cap Nuts (4)	#14 – Cotter Pin (1)	#21 – Wheel Spacers (2)

Tools required: adjustable wrench, wrench **Pre-Assembly:** verify all components

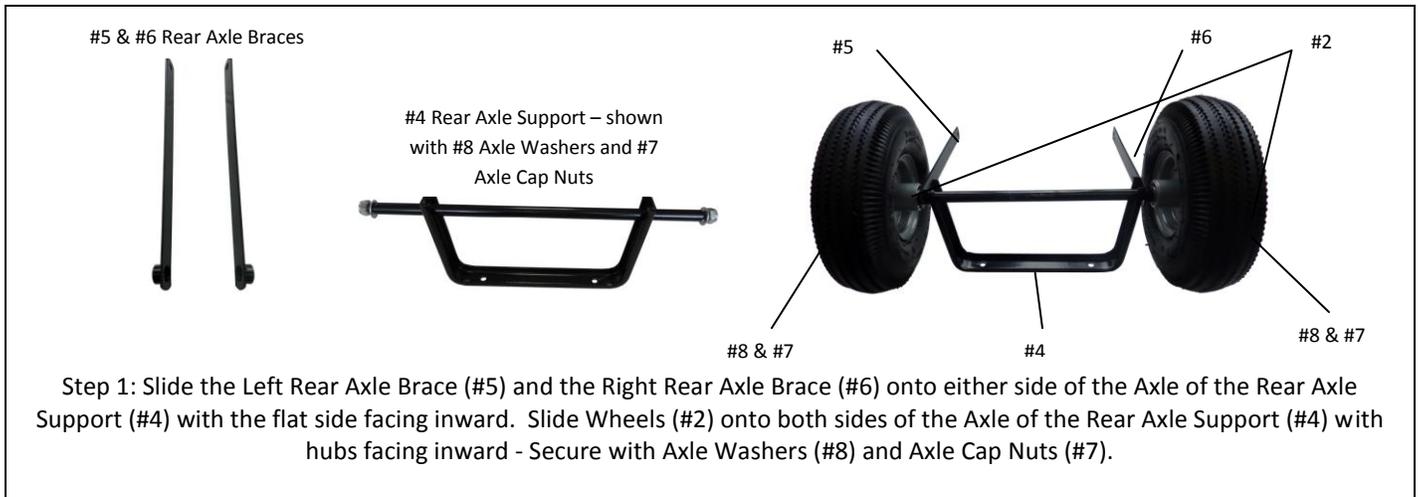

Front Axle Support Assembly (see Steps 2 & 3) – shown with #8 Axle Washers & #7 Axle Cap Nuts



#12

#10



#9

#2

Step 4: Slide Wheel Spacers (#21) onto both sides of the Axle of the Front Axle Support Assembly. Slide the Wheels (#2) onto both sides of the Axle of the Front Axle Support Assembly with hubs facing inward - Secure with Axle Washers (#8) & Axle Cap Nuts (#7).

Rear Axle Brace Holes #1 Bed



Rear Axle Assembly Holes



Rear Axle Assembly

#5 & #6

#4

#15, #18 & #19



Step 5: Place the Bed (#1) of the Cart with the top facing down on a flat surface. Place the Rear Axle Assembly upside down & line up the holes of the Rear Axle Braces (#5 & #6) with the Rear Axle Brace Holes on the Bed (#1) & the holes on the Rear Axle Support (#4) with the Rear Axle Assembly Holes on the Bed (#1). Secure the Rear Axle Braces with 20mm Machine Screws (#20) & Lock Nuts (#19). Secure the Rear Axle Support (#4) with Frame Bolts (#15), Bolt Washers (#18) & Lock Nuts (#19).

Center Front Axle Brace Hole #1 Bed



Front Axle Assembly Holes



Front Axle Assembly

#12

#9

#15, #18 & #19



#10

Step 6: Place the Front Axle Assembly upside down and line up the hole on the Center Front Axle Brace (#12) with the Center Front Axle Brace Hole on the Bed (#1) and the holes on the top of the Front Axle Support (#9) with the Front Axle Assembly Holes on the Bed (#1). Secure with Frame Bolts (#15), Bolt Washers (#18) & Lock Nuts (#19).

#13 Handle Coupler



#13

#3

#16, #18 & #19

Step 7: Place the Handle Coupler (#13) between the front forks of the Yoke (#10) and Insert the Handle (#3) into the Coupler opening. Line the holes up and secure with the 60mm Handle Bolt (#17), Bolt Washer (#18) & Lock Nut (#19).



Ensure all Bolts are Tight. Your Marathon Yard Wagon is now ready to use!