
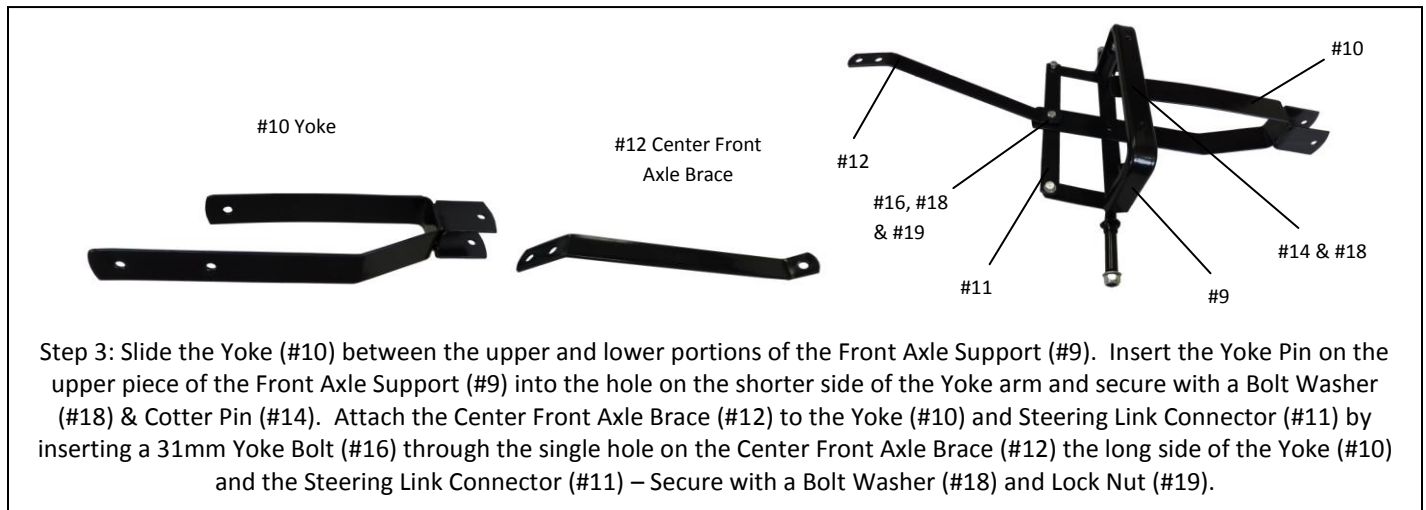
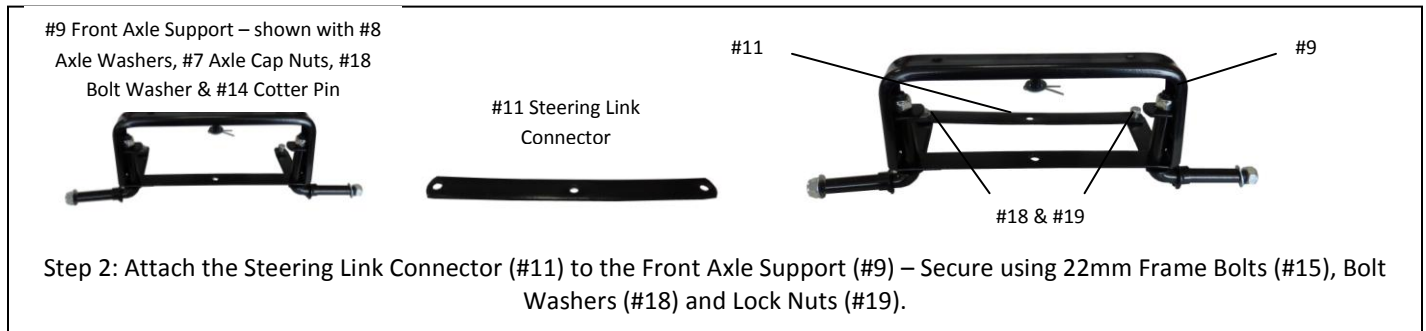



# YARD WAGON Assembly Instructions

# Description (Qty.)	# Description (Qty.)	# Description (Qty.)
#1 – Bed (1)	#8 – Axle Washers (4)	#14 – Cotter Pin (1)
#2 – Wheel (4)	#9 – Front Axle Support (1)	#15 – 22mm Frame Bolts (14)
#3 – Handle (1)	#10 – Yoke (1)	#16 – 31mm Yoke Bolt (1)
#4 – Rear Axle Support (1)	#11 – Steering Link Connector (1)	#17 – 64mm Handle Bolt (1)
#5 – Left Rear Axle Brace (1)	#12 – Center Front Axle Brace (1)	#18 – Bolt Washers (17)
#6 – Right Rear Axle Brace (1)	#13 – Handle Coupler (1)	#19 – Lock Nuts (16)
#7 – Axle Cap Nuts (4)		



**Tools required:** adjustable wrench, wrench    **Pre-Assembly:** verify all components

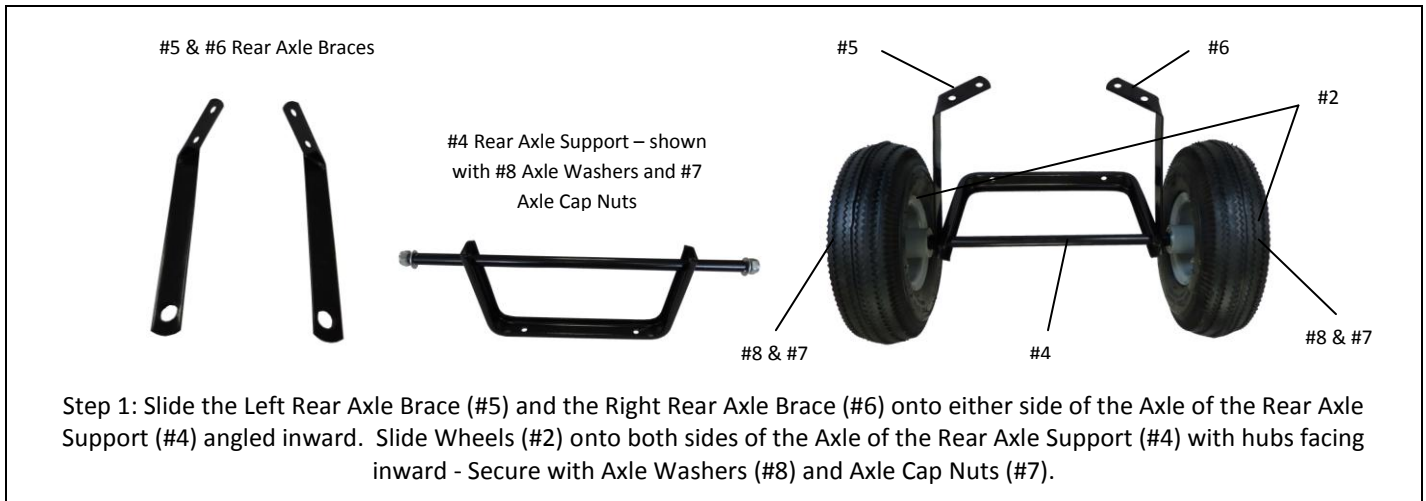



Front Axle Support Assembly (see Steps 2 & 3) – shown with #8 Axle Washers & #7 Axle Cap Nuts

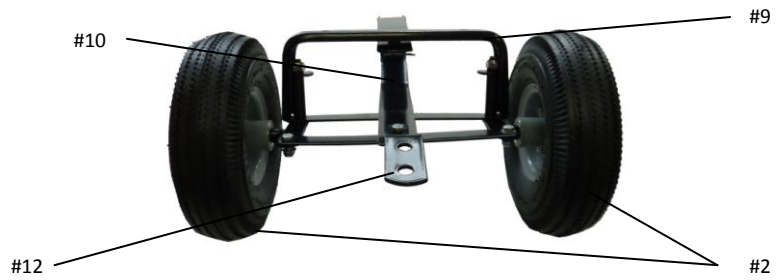

Step 4: Slide Wheels (#2) onto both sides of the Axle of the Front Axle Support Assembly with hubs facing inward - Secure with Axle Washers (#8) and Axle Cap Nuts (#7).

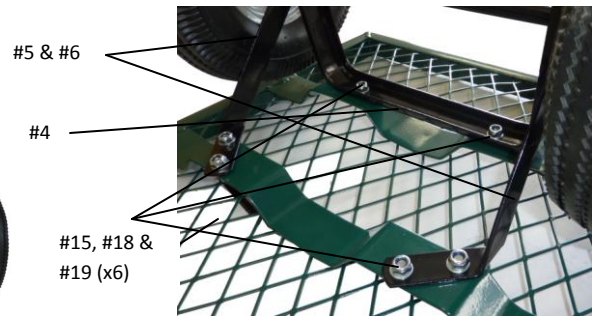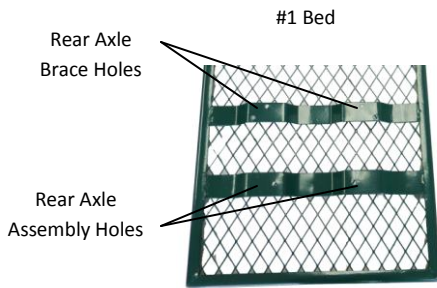


Step 5: Place the Bed (#1) of the Cart with the top facing down on a flat surface. Place the Rear Axle Assembly upside down and line up the holes of the Rear Axle Braces (#5 & #6) with the Rear Axle Brace Holes on the Bed (#1) and the holes on the Rear Axle Support (#4) with the Rear Axle Assembly Holes on the Bed (#1). Secure with Frame Bolts (#15), Bolt Washers (#18) and Lock Nuts (#19).

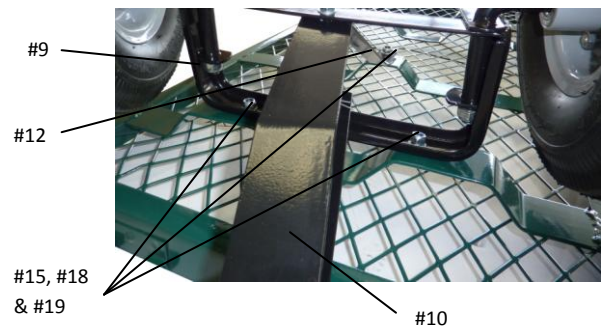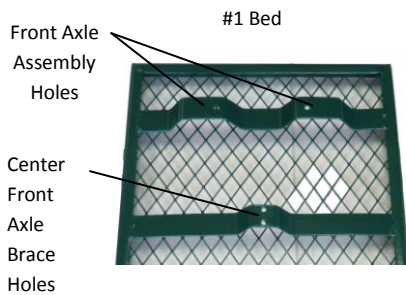

Step 6: Place the Front Axle Assembly upside down and line up the holes on the Center Front Axle Brace (#12) with the Center Front Axle Brace Holes on the Bed (#1) and the holes on the top of the Front Axle Support (#4) with the Front Axle Assembly Holes on the Bed (#1). Secure with Frame Bolts (#15), Bolt Washers (#18) & Lock Nuts (#19).

#13 Handle Coupler

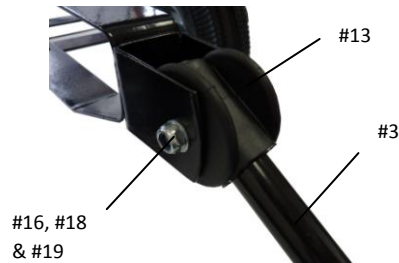

Step 7: Place the Handle Coupler (#13) between the front forks of the Yoke (#10) and Insert the Handle (#3) into the Coupler opening. Line the holes up and secure with the 63mm Handle Bolt (#17), Bolt Washer (#18) & Lock Nut (#19).



Ensure all Bolts are Tight. Your Marathon Yard Wagon is now ready to use!