YARD BARROW[™] Assembly Instructions

# Description (Qty.)	# Description (Qty.)	# Description (Qty.)
#1 – Steel Frame/Handles (1)	#6 – Front Frame Support (1)	#11 – 5/16" x 2-1/8" Axle
#2 – Poly Tray (1)	#7 – Leg Connector (1)	Bracket Bolt* (4)
#3 – Wheel (1)	#8 – Legs (2)	#12 – 5/16" Flat Washer* (11)
#4 – Axle Bracket [*] (2)	#9 – 5/16" x 1-5/8" Tray Bolt* (5)	#13 – Lock Washer* (11)
#5 – Axle (1)	#10 – 5/16" x 1-1/8" Back Leg	#14 – 5/16" Nut* (11)
	Bolt* (2)	#15 – Rubber Washer* (4)
* Packed in Separate Parts Kit		

Tools required: adjustable wrench, large flat screwdriver


Pre-Assembly: verify all components

Assembly:





Step 2: Place the Steel Frame/Handles (#1) right side up and attach wheel assembly and front frame support by placing Axle Bracket Bolts (#11) through Front Frame Support (#6), frame & axle brackets on wheel assembly. Use Washers (#12), Lock washers (#13) and Nut (#14) to secure. Tighten Loosely.

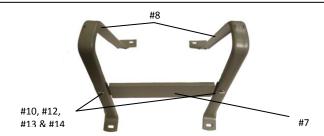

Step 3: Attach the Leg Connector (#7) to the inside of the Legs (#8) by placing Back Leg Bolts (#10) through the legs and the leg connector. Use Washers (#12), Lock Washers (#13) and Nuts (#14) to secure. Tighten Loosely.



Step 4: Place the Poly Tray (#2) upside down and insert Tray Bolts (#9) through the 4 holes in the bottom of tray from the inside sliding Rubber Washers (#15) over the Tray Bolts (#9) on the outside of tray to hold in place.



(#13) and Nuts (#14) to secure. Tighten Loosely.



