


# GARDEN WAGON


## ASSEMBLY INSTRUCTIONS



### PARTS INCLUDED

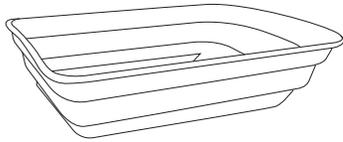


Tray (1)




Front Leg (1)



Back Leg (1)



Wheels (4)



Frame (1)



Handle (1)




Coupler (1)



Large 14mm Locknuts (3)



Small 8mm Locknuts (5)



Long 60mm Bolts (1)



Short 45mm Bolts (4)



14mm Flat Washers (3)



5/8" Flat Washers (4)



8mm Flat Washers (5)



Cotter Pins (4)

### TOOLS



**INCLUDED**  
Hex Wrench (1)



Crescent Wrench

### WARNINGS



Not for highway use.  
Wear protective eyewear and gloves.



### ASSEMBLY INSTRUCTION STEPS

#### 1 Step One




Place **Frame** on flat surface with fixed frame bolts facing up.

Remove **14mm Flat Washer** and **Large 14mm Locknut** from single front fixed frame bolt.

Place **Front Leg** over single fixed frame bolt with handle bracket facing outward.

Place **14mm Flat Washer** and **Large 14mm Locknut** on single fixed frame bolt and tighten\*.

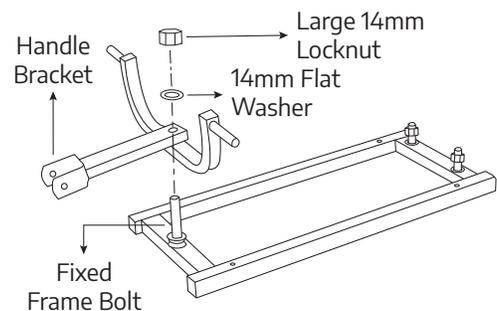

**\*NOTE:** We recommend to hand tighten all bolts/nuts initially and then fully tighten all bolts with a crescent wrench once full assembly is complete.


# ASSEMBLY INSTRUCTION STEPS (CONT)

## 2 Step Two

Remove **14mm Flat Washers** and **Large 14mm Locknuts** from rear/double fixed frame bolts.

Place **Back Leg** over double fixed frame bolts.


Place **14mm Flat Washers** and **Large 14mm Locknuts** onto fixed frame bolts and tighten.

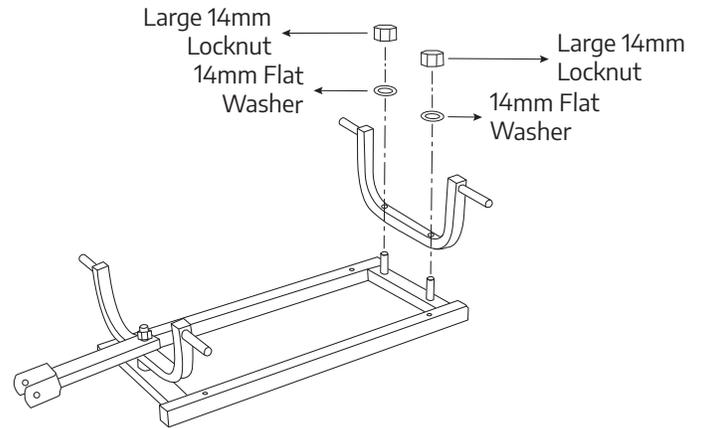

## 3 Step Three

Turn frame assembly over and place **Tray** onto the frame, lining up the holes in the tray with the holes in the frame and with rounded side of the tray facing away from the handle bracket.

Insert **Short 45mm Bolt** into each hole and secure with **8mm Flat Washers** and **Small 8mm Locknuts**.

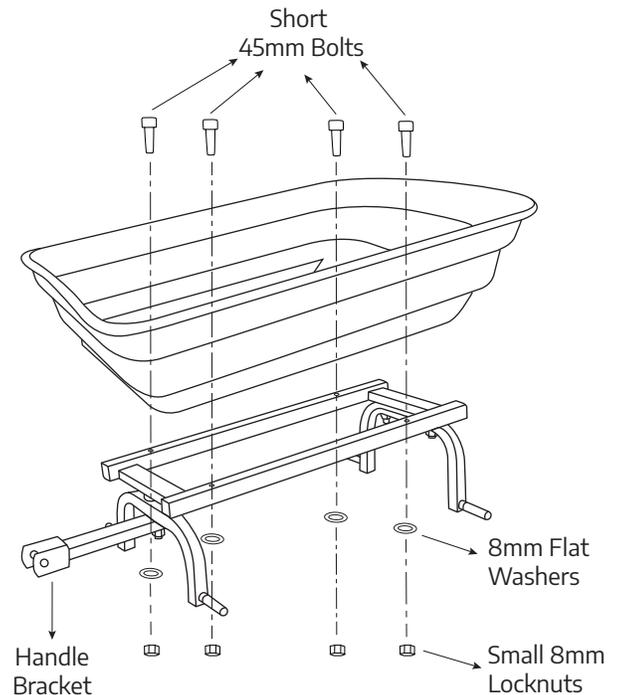

# ASSEMBLY INSTRUCTION STEPS (CONT)


## 4 Step Four

Slide one **Wheel** onto each axle, hub facing in.

Slide **5/8" Flat Washer** on axle and insert **Cotter Pin** into axle hole.

Bend cotter pins to secure tire onto axle.

Repeat steps on other wheels.

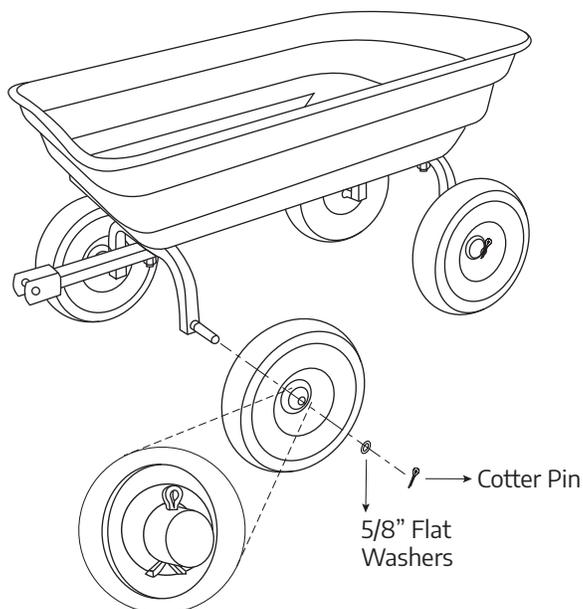

## 5 Step Five

Remove **Long 60mm Bolt**, **8mm Flat Washer** and **Small 8mm Locknut** from **Handle/Coupler** assembly.

Insert **Long 60mm Bolt** through handle/coupler assembly and front leg handle bracket and tighten with **8mm Flat Washer** and **Small 8mm Locknut**.

Tighten everything with (included) hex wrench and crescent wrench.

Enjoy your Garden Wagon!

