

marathon



Yard Rover Assembly Instructions

Use also for Pink Barrow, Ladybug and Pumpkin Barrow









For video instructions, please visit
www.marathonind.com/YR.aspx

Parts Included:




Tools Needed:

Flat-head Screwdriver
Crescent Wrench

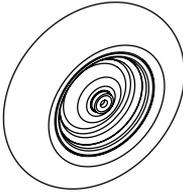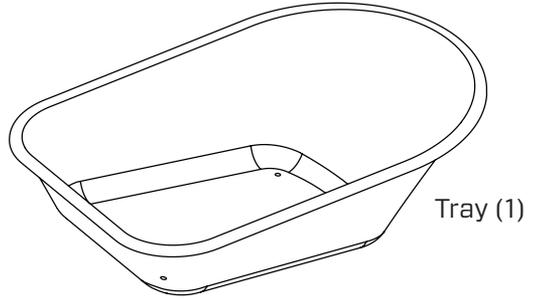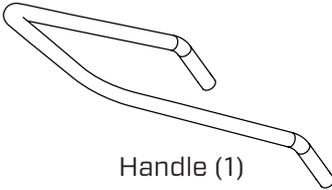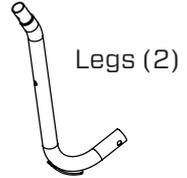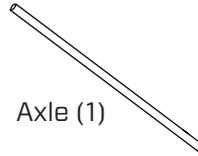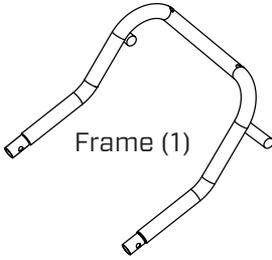


Wheel* (2)

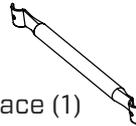


Shim (2)



Long Bolt (2)



Short Bolt (6)

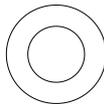


Big Washer (2)



Nylock Nut (8)



Small Washer (8)



Cotter Pin (2)

2




Not for highway use.
Air Tire Max. Inflation Pressure
25psi. Manual pump only.
Do not use air compressor.



1

Step One:

Put on your gloves and protective eye-wear.
Slide **axle** through axle brackets on the **frame**.

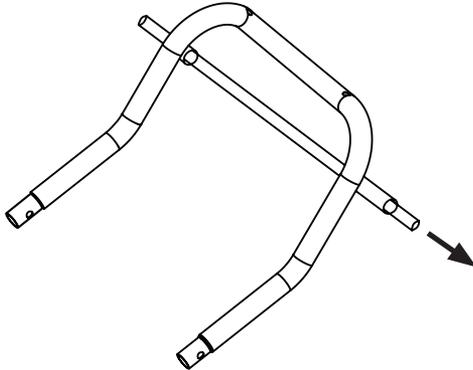


2

Step Two:

With valve stem* facing out, slide first **wheel** through axle. Add **big washer** and insert **cotter pin** through hole in axle. Split ends of cotter pin to hold it in place.

*No valve stem on Flat Free Tires

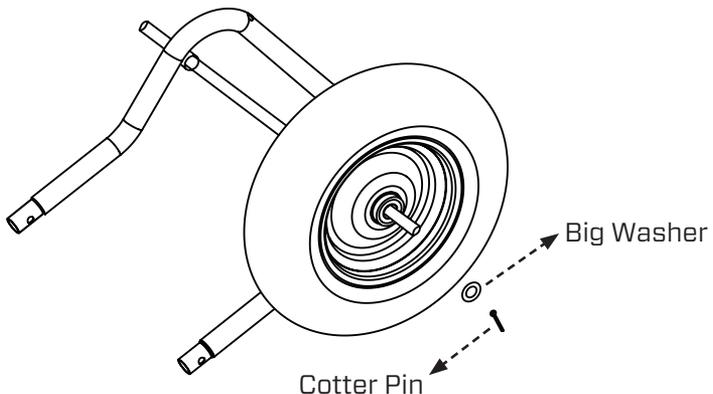


3

3

Step Three:


Repeat step 2 with the second **wheel** adding **big washer** and **cotter pin**, splitting both ends to keep it in place.

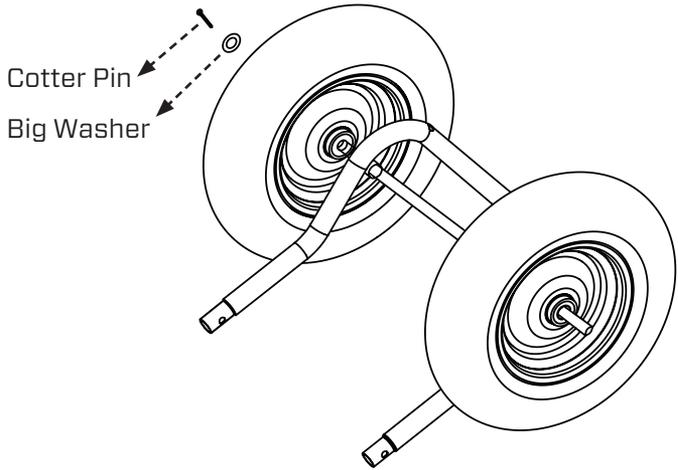

4

Step Four:


Attach one **leg** to frame. Secure with **short bolt**, facing in. Add **small washer** and **nut**. Tighten with your fingers.

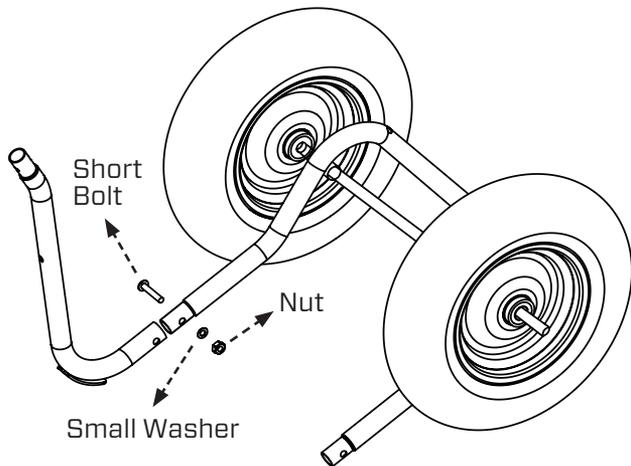

5

Step Five:


Repeat step 4 on other **leg**, attaching it to the frame and securing with **short bolt, small washer and nut**. Tighten with your fingers.

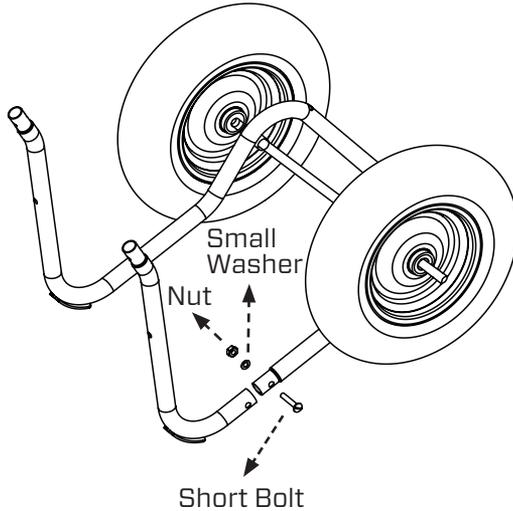

6

Step Six:


Place **leg brace** against legs. Secure both sides with **short bolts, facing in**. Add **small washer and nut**. Tighten with your fingers.

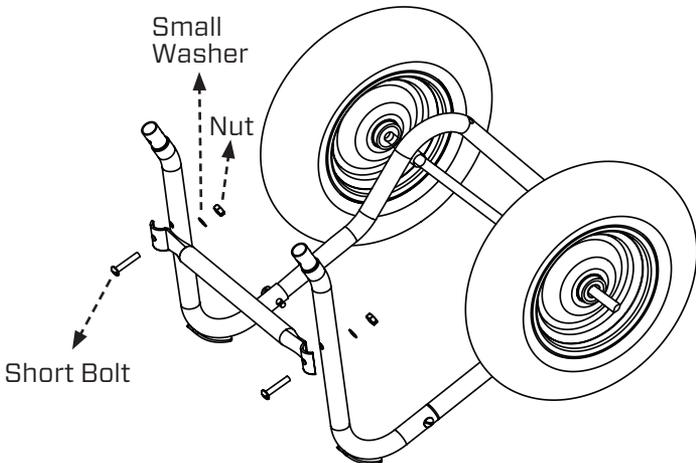

7

Step Seven:


Place **handle** on legs. Bolts will be added on step 9.

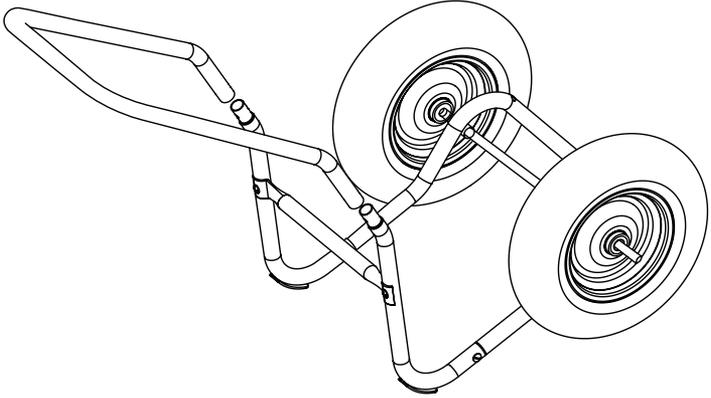

8

Step Eight:


Place tray, aligning front holes first. Slide **short bolts** through both front holes. Add **small washers** and **nuts**. Tighten with your fingers.

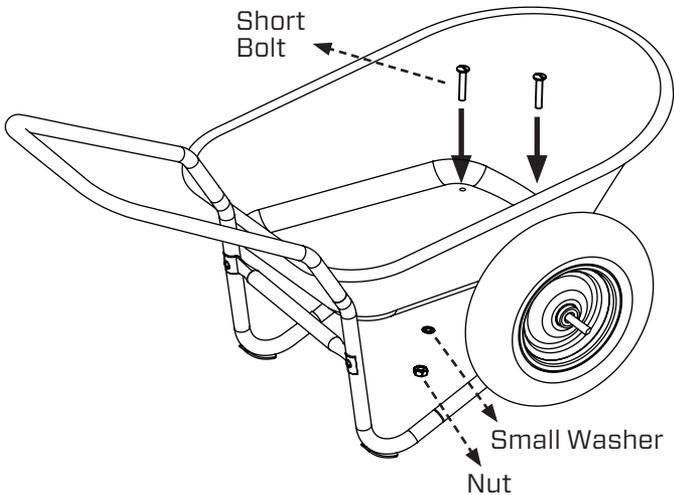

9

Step Nine:


Align the **shims** between tray and handle, matching the curve of the shim to the handle. Insert **long bolts** through tray, top hole of shim and handle. Add **washers** and **nuts**. Tighten with your fingers.

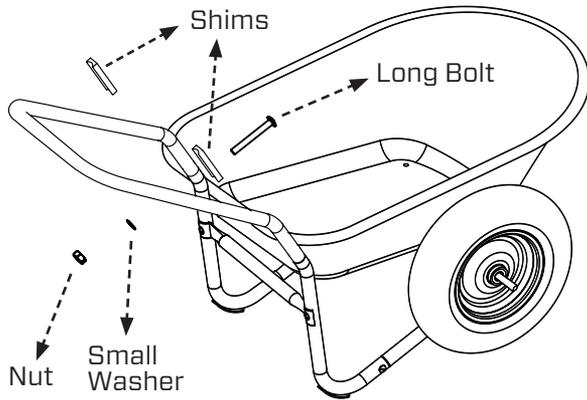

10

Step Ten:

Tighten everything up with wrench and screwdriver. Enjoy your Yard Rover!

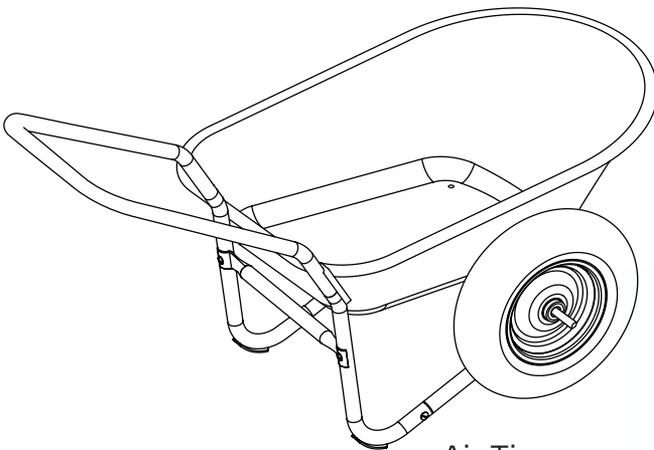

Air Tire
Max. Inflation 25psi.
Manual pump only.

7

marath•n

Toll Free

877-425-1640

253-893-7021

Email: sales@marathonind.com

Website: www.marathonind.com



For Video Instructions

Please scan the QR code or go to
www.marathonind.com/YR.aspx