




# **Garden Barrow Assembly Instructions**

#### **Parts Included:**

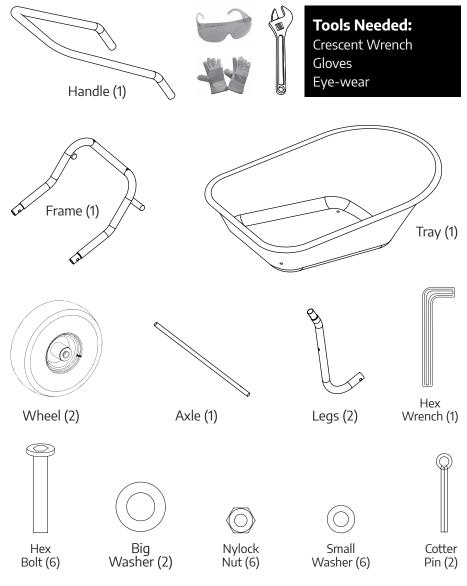




Not for highway use. Max. Inflation Pressure 30psi. Manual pump only. Do not use air compressor.





#### **Step One:**


Put on your gloves and protective eye-wear. Slide **axle** through axle brackets on the **frame**.

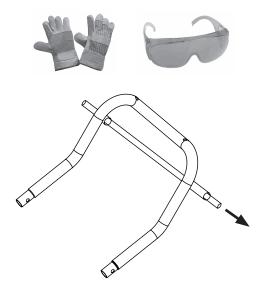

2

## **Step Two:**

With valve stem facing out, slide first wheel through axle. Add big washer and insert cotter pin through hole in axle. Split ends of cotter pin to hold it in place.

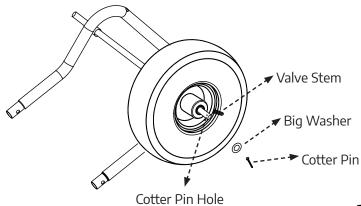


2



## **Step Three:**


Repeat step 2 with the second wheel adding big washer and cotter pin, splitting both ends to keep it in place.

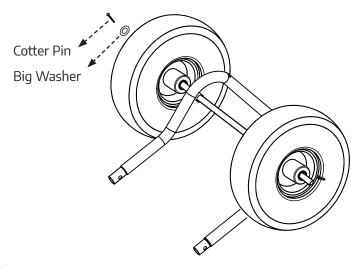



## **Step Four:**


Attach one **leg** to frame. Secure with **bolt**, facing in. Add **small washer** and **nylock nut**. Tighten with your fingers.

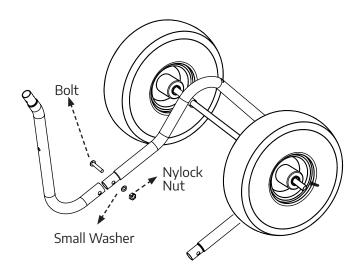



## **Step Five:**


Repeat step 4 on other **leg**, attaching it to the frame and securing with **bolt**, **small washer** and **nylock nut**. Tighten with your fingers.

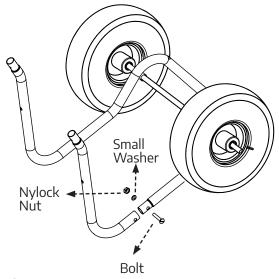



# **Step Six:**


Place handle on legs. Bolts will be added on step 8.

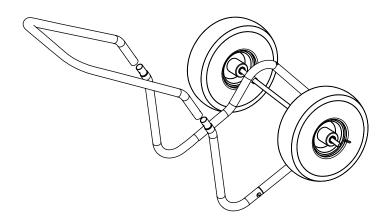



#### **Step Seven:**


Place tray, aligning front holes first. Slide **bolts** through both front holes. Add **small washers** and **nylock nuts**. Tighten with fingers.

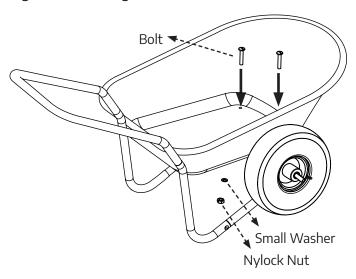

8

# **Step Eight:**

Align tray and handle. Insert **bolts** through tray and handle. Add **washers** and **nylock nuts**. Tighten with your fingers.

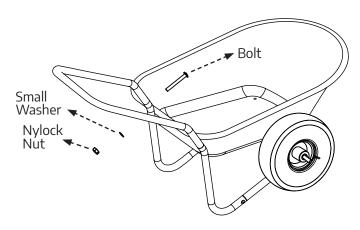

9

# **Step Nine:**

Tighten everything up by using a hex wrench to hold the bolts in place and spinning the crescent wrench at the nylock nut. Enjoy your Garden Barrow!



Max. Inflation 30psi. Manual pump only.



**Toll Free** 877-425-1640 253-893-7014

**Email:** sales@marathonind.com **Website:** www.gardenstarcarts.com

Made in China